

MUTE THE WORLD. PLAY YOURS.

BASIC OPERATION FUNCTIONS

AUTO POWER-ON/OFF

To use the earbuds, open the cover of the charging case. The headset will turn on automatically and enter the TWS pairing state accompanied by a "Bluetooth mode, Pairing" prompt sound.

If pairing is not done in 5 minutes, the earbuds will be automatically powered off accompanied by a "Power Off" prompt sound. If you put the earbuds into the charging box, the earbuds will be automatically disconnected from the phone and enter the charging state.



CONNECTION

Once the lid of the charging case is opened and earbuds are taken out from the charging case, Search out "Probuds T51" inside phone Bluetooth list, click connection, accompanied by a "Connected" prompt sound.

To disconnect the earbuds, disconnect the Bluetooth connection. It will be followed by a "Disconnected" prompt sound,



Automatic re-connection

After power on (opening the cover case of the charging case), the headset will actively connect back to the last paired device with the "Connected" prompt sound, if in range with the Bluetooth device.



MANUAL POWER OFF

When buds are out of case, within 1 minute long press one of earbuds touch key area for 5 seconds, which allows you to entering pairing stage again with voice prompt sound. Disconnected-> Bluetooth Mode-> Pairing

ANSWER CALL

Double tap on the earbud (L) or (R).

REJECT CALL

Triple tap on the earbud (L) or (R).

DISCONNECT CALL

Double tap on the earbud (L) or (R).

CANCEL DIALING

Triple tap on the earbud (L) or (R).

MUSIC PLAY/PAUSE

In music playing mode, single tap the earbud (L) or (R) to play/pause music.

Note- Same operation is applicable for 'videos' as well.

NEXT SONG

In music playing mode, 3 times press the earbud (L) to play next song.

Note- Same operation is applicable for 'videos' as well.

PREVIOUS SONG

In music playing mode, 3 times press the earbud (R) to play previous song.

Note - Same operation is applicable for 'videos' as well.

ANC/TRANSPARENCY/NORMAL MODES

Long press on the earbud (L) or (R) for 3 seconds, accompanied by a respective voice prompt sounds (ANC On, Transparency On, Normal)

Operation works: ANC->Transparency->Normal and then repetitive working.

ANC mode will give you an noise free enviroment upto 50dB.

DUAL DEVICE PAIRING

Dual device pairing works by first connecting the TWS to the 1st device, then turning OFF Bluetooth on that device. Next, connect the Probuds T51 to the 2nd device. Once connected, turn Bluetooth back ON on the 1st device and select Probuds T51 again. Now, both device are connected with the Probuds T51.

OR

Put out the bud('s), within 1 minute long press one of earbuds touch key area for 5 seconds, which allows you to entering pairing stage for 2nd device.



VOICE ASSISTANT TURN ON/OFF (SIRI/GOOGLE ASSISTANT)

On standby or music mode, tap the earbud (L) or (R) 2 times to 'turn on' voice assistant.

PRO-GAME MODE

Tap the earbud (L) or (R) 4 times to 'Turn on' the Pro Game Mode (low latency gaming mode), accompanied by a "Pro Game Mode" prompt sound.

Repeat operation will 'Turn off' the pro game mode, accompanied by a "Bluetooth mode" prompt sound.

LOST WARNING/OUT OF RANGE

When the device is out of BT range or is disconnecting abnormally, there will be a "Disconnected" prompt sound.

RESET

In connected or disconnected state, touch & hold the both earbud (L) and (R) together for 10 secs to clear the connection information with the previous Bluetooth device('s). Post completion, Earbuds will again enter the TWS pairing state accompanied by a "Bluetooth mode, Pairing" prompt sound.

LOW BATTERY WARNING

When earbuds battery is below 20%, earbuds will alert with "Battery Low" prompt sound. Reminder at after 5-minute intervals with a "Battery Low" sound until power off.

TWS CASE LED LIGHT STATUS

OPENING/CLOSING THE TWS CASE

White light on TWS case will be lit up for 3-4 seconds

WHILE CHARGING

White light on TWS case will blink continuously

FULL CHARGED

TWS case displays a constant white light

CASE LOW BATTERY

Red light on TWS case will be lit up when case battery reached 20% or below.



ANDROID APP:

For Android: Users can download the App 'ProSpot' from Google Play Store.

ProSpot audio app for Probuds T51 earbuds enables sound customization (EQ, ANC), Buds control personalization, battery and device monitoring, firmware updates, and smart features like find my earbuds, Spatial Audio, Pro-Game mode and voice assistant integration—enhancing user experience, product value, and long-term engagement.



SAFETY AND MAINTENANCE

Please read the below suggestions in order to help prolong the product's lifespan and understand the warranty clauses clearly.

- » Keep the product dry, do not put it in humid circumstance to avoid short circuit.
- » Do not expose it to the sun or high heat. High heating will shorten the lifespan of electronic components, damage battery and deform plastic parts.
- » Do not put it in cold circumstances to avoid damage to the PCBA board.
- » Do not attempt to take apart the product.
- » Do not drop, vibrate strongly, strike with hard objects, to avoid damage to the inner electronic circuit.
- » Do not use high chemical products, detergent to clean the item.
- » Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- » Do not overcharge continuously. This is for the sake of lifespan.



Probuds T51
BY LAVA

www.lavamobiles.com

