

ENGINEERED TO XPLORE

POP OPEN TO LIGHT UP

POP OPEN THE CASE AND WATCH THE EARBUDS LIGHT UP IN ICE BLUE AND WHITE.

PRODUCT EXPLANATION



HOW TO USE THE SCREEN - NAVIGATION GUIDE

TWO BUTTONS. ENDLESS CONTROL.

The screen is navigated using the UP and DOWN side buttons on the left of the case. Simple, intuitive, and requires zero tech knowledge.



- 1 Wake the Screen**
Press either button once to wake the screen and see the time/battery display.
- 2 Scroll Through Menus**
Press UP or DOWN to scroll through available screen functions: Music, Volume, Flashlight, Stopwatch, Battery, Reset, Calls.
- 3 Select a Function**
Hold/press to enter the selected function. For example: select Music to control your track.
- 4 Adjust Settings**
Once inside a function (like Volume or Brightness), use UP/DOWN to increase or decrease.
- 5 Exit / Auto-Sleep**
The screen auto-sleeps after a few seconds of inactivity to save battery life.

WHAT IS THE SCREEN



The Probuds Xplore 25° design has a real display in front. It is NOT a touchscreen - instead, you use two physical navigation buttons on the side to interact with it. It shows time, battery %, and lets you control music, calls, flashlight, and more — without touching your phone.



Music Control

Play/Pause, Next, Previous track from the case



Volume

Adjust volume directly without unlocking phone



Brightness

Control screen brightness for visibility



Flashlight

Instant flashlight — no phone unlock needed



Stopwatch

Built-in timer for workouts & tasks



Battery %

Real-time battery for case + each earbud



Device Reset

Quick reset option via screen menu



Call Pick & Drop

Accept or end calls from the

BATTERY INDICATION OF CHARGING CASE

REAL TIME BATTERY DISPLAYS ON THE SCREEN

FUNCTION DEFINITION



AUTOMATIC POWER ON AND OFF

POWER ON

Opening the cover of charging case, the earbuds will be automatically powered on with a "Power On, Pairing" prompt sound. If left and right earbuds are successfully paired, you will hear a "Du" prompt sound. If earbuds do not connect with Bluetooth device within three minutes, the earbuds will automatically power off with a "Power Off" prompt sound. If you put the earbuds into the charging case, the earbuds will automatically disconnect from the device and enter the charging state.

POWER OFF

Press and hold left or right "**MFB**" for 5 seconds and white light will be on, accompanied by a "**Power Off**" sound.

PAIRING BETWEEN L AND R EARBUD



PAIRING

Open the charging case or press and hold left or right "**MFB**" for 3 seconds

Earbuds will be paired automatically within approximate 15 seconds after powering on, the ice blue and white lights of the left and right earbuds will flash alternately.

After left and right earbud are paired,

Master Earbud: ice blue and white lights flash alternately.

Slave Earbud: ice blue light flashes quickly once every 5 seconds.

BLUETOOTH CONNECTION



CONNECTED / DISCONNECTED

Press the top of the charging case to pop out the middle housing, the ice blue and white lights of the two earbuds will flash alternately. After left and right earbuds are paired, ice blue and white lights on Master earbud flash alternately and ice blue light on Slave earbud flashes quickly once every 5 seconds. Search for "**Probuds T25**" in your mobile phone's Bluetooth list and click to connect, accompanied by a "**Connected**" sound, and the lights of left and right earbuds will be off. Disconnect the Bluetooth connection, there will be a "**Disconnected**" sound.

AUTOMATIC RECONNECTION

After opening the cover of charging case, earbuds will automatically connect back to the last connected device with the "**Connected**" sound.

PLAY

Tap 2 times 'L' or 'R' bud

PAUSE

Tap 2 times 'L' or 'R' bud

NEXT SONG

Tap 3 times 'R' bud to play next song, accompanied by **"Du"** sound.

PREVIOUS SONG

Tap 3 times 'L' bud to play previous song, accompanied by **"Du"** sound.

AI VOICE ASSISTANT

When earbuds are connected to mobile phone, tap 4 times 'L' bud to turn on Siri or voice assistant.

GAMING MODE

Tap 4 times 'R' bud to enable the gaming mode, accompanied by a **"Pro Game Mode"** prompt sound.

EXIT GAMING MODE

In Pro Game Mode, tap 4 times 'R' bud to disable the gaming mode, accompanied by a **"Du"** prompt sound.

RING TONE OF INCOMING CALL

Android and Apple with their own ringtones.

ANSWER CALL

Tap 2 times 'L' or 'R' bud to answer the call, accompanied by a **"Du"** prompt sound.

HANG UP CALL

Tap 2 times 'L' or 'R' bud to hang up the call, accompanied by a **"Du"** prompt sound.

REJECT CALL

Press and hold the 'L' or 'R' bud for 3 seconds, accompanied by a "Du" prompt sound.

CANCEL DIALING

Tap 2 times 'L' or 'R' bud, accompanied by a "Du" prompt sound.

CHARGING THE EARBUDS

Place the earbuds into the charging case and close the cover, earbuds will be powered off. The charging case charges the earbuds, and the white light of the earbuds will be on all the time. After the earbuds are fully charged, the light will be off.

LOW BATTERY

Earbuds provide low battery reminder when battery is at 10%. The white light flashes every 5 seconds, and will remind at 5-minute intervals with a "Battery Low" sound until power off.

DISPLAY BATTERY POWER ANDROID/iOS

Display the battery power of "Probuds T25" of earbud on Android/iOS



SAFETY AND MAINTENANCE

Please read the following instructions carefully to maximize product lifespan and understand the warranty terms.

- » Keep the product dry and away from humid environments to prevent short circuits.
- » Avoid exposing the product to direct sunlight or high temperatures, as this may damage the battery, electronic components, and plastic parts.
Do not expose the product to extremely cold temperatures, as this may damage the PCB.
- » Do not attempt to disassemble the product.
- » Avoid dropping, striking, or subjecting the product to strong vibrations, as this may damage the internal circuitry.
- » Do not use harsh chemicals, detergents, or solvents to clean the product.
Avoid scratching the surface with sharp objects, as this may damage the casing and affect its appearance.
- » Do not overcharge the product, as this may reduce battery life.



XPLORE 25°
www.lavamobiles.com

