 


BUTTON OVERVIEW

- 1) Switch in between 3 EQ Music Modes- Pro-Balance, Pro-Rock & Pro-Bass
- 2) Device starts in Pro-Balance mode by default
- 3) Press twice to switch to the next mode
- 4) Press for 4 secs to enable/disable the voice assistance

Long Press to Power On/Off
Single Click to Play/Pause
Single Click to Answer the call
Single Click to Hang-up the Call
Triple Click to Redial the last number

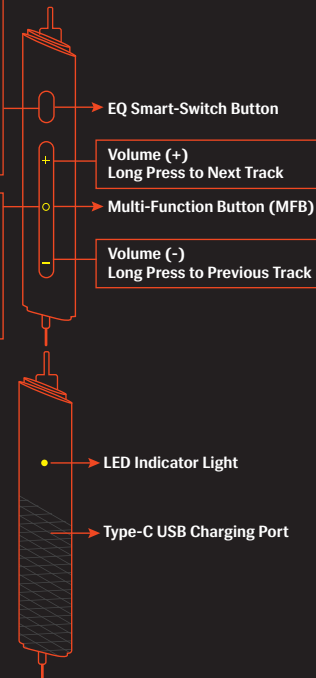

EQUALIZER MODES

What is EQ? (Equalizer)

EQ = Equalizer. It helps you customize the way your music sounds by adjusting different sound frequencies like bass, mids, and treble.

This allows you to enjoy different music styles the way you like.

The PROBUDS XSCAPE 13° lets you switch between 3 pre-set EQ modes — directly from the neckband, without needing any app.

PRO BALANCE

Designed for a clean and natural listening experience where every element of the audio feels well-balanced and comfortable for long listening sessions.

Best for: Calls, Podcasts, News

PRO ROCK

Tuned to make vocals, guitars, and energetic beats feel sharper and more dynamic, giving fast-paced music a more lively and powerful feel.

Best for: Rock, EDM, Gym Workouts

PRO BASS

Focused on delivering deeper and more impactful bass that adds extra punch and immersion to beat-heavy music and entertainment content.

Best for: Hip-Hop, R&B, Pop, Bollywood



BATTERY



UPTO 70 HOURS OF BATTERY BACKUP

Charge it once, forget it for days. Experience upto 70 hours of battery backup—giving you nearly 3 days of an 'always-on, always-ready' audio experience. For Best audio Experience listen to the music at 60% volume

STEPS TO FOLLOW BEFORE USE



CHARGING

Fully charge the neckband before using it.

First Time pairing: Choose a Device which is compatible with Bluetooth headset or other Bluetooth Device to pair with the "PROBUDS N13."



SWITCHING THE NECKBAND ON & OFF



POWER ON/OFF

POWER ON : Long press the Multi-function button (MFB) for 3 seconds until the white indicator light flashes for 2-3 seconds with the prompt tone "Power on, Pairing".

POWER OFF : Long press the Multi-function button (MFB) for 4-5 seconds until the blue indicator light flashes for 1 second with the prompt tone "Power off".



NOTE After power on, if the device is not connected until 5 minutes, it'll power off automatically with the prompt tone "Power off".

CONNECTING WITH PHONE



PAIRING

STEP 1

When turned on, the blue and white lights flash alternately in PROBUDS XSCAPE 13° to start the pairing.

STEP 2

Search with Bluetooth on your Device.

STEP 3

Choose "PROBUDS N13"

STEP 4

*Blue LED + Prompt tone " Connected" on PROBUDS XSCAPE 13°



NOTE

When powered on, "PROBUDS XSCAPE 13°" automatically connects with the last paired device if it is within the connection range with Bluetooth turned on: Notifies with a voice prompt, "Connected." If the device disconnects, notify with the voice prompt "Disconnected."





DUAL PAIRING

Follow the below steps to connect 2 devices with PROBUDS XSCAPE 13°:

Pair “PROBUDS N13” with “Device A”. Once pairing is done, disable the Bluetooth on Device A.

Pair “PROBUDS N13” with “Device B” and after connecting successfully enable the bluetooth on Device A.

Both Devices A & B are now connected simultaneously with the Device PROBUDS XSCAPE 13°.

NOTE If your Device supports the automatic re-connection function, ‘PROBUDS XSCAPE 13°’ will be automatically connected to the previous connected devices.



GAME MODE



GAME MODE WITH ULTRA LOW LATENCY

Enter the ultimate gaming experience mode with always active 45ms Ultra Low Latency & enjoy lag free audio.

FACTORY RESET



RESET FACTORY SETTING

Press both volume buttons “+” & “-” together for 5 seconds to reset the neckband.

All pairing records of your neckband will be deleted.

CONTROLLING THE CALLS WITH MFB



ANSWER/END CALL

Short press the “Multi-function button (MFB)” to answer or end a call—notifies with the voice prompt “Incoming call” or the phone ringtone.



SWITCHING A CALL (2nd Call)

- Short press the “Multi-function button (MFB)” to answer the second call & hang up the first call
- Double press the “Multi-function button (MFB)” to answer the second call & hold up the first call
- Long single press the “Multi-function button (MFB)” to reject the second call and answer the first call.



REJECT CALL

Press the “Multi-function button (MFB)” twice during an incoming call.



REDIAL LAST DIALED

Triple-click the “Multi-function button (MFB)” to redial the last number from the device call list.

NOTE

The above functions work in a standby or usage state.

CONTROLLING THE MUSIC WITH MFB




MULTIMEDIA (MUSIC/VIDEO) PLAY/PAUSE

In Music/Video mode, press the “Multi-function button (MFB)” once to Pause. Press it again to play.



VOLUME UP/DOWN

Short press the “-” button for volume down. Short press the “+” button for volume up.
The beep sound indicates the maximum/minimum volume.

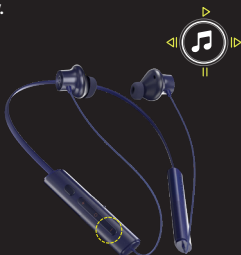



PREVIOUS/NEXT SONG/VIDEO

Press “-” button for 2 seconds to play the previous song/video.
Press “+” button for 2 seconds to play the next song/video.

CONTROLLING THE VOICE ASSISTANT



ENABLING/DISABLING THE VOICE ASSISTANCE

AI Voice Assistant (Google/AI Apps) :- At the standby or music state, press the EQ Smart-Switch Button for 4 seconds and release. A beep sound will enable the voice assistant.

Pressing EQ Smart-Switch Button again will disable the same.



BATTERY & CHARGING INDICATORS



LOW BATTERY

At below 20% battery, Neckband will notify with voice prompt “Low Battery”, and blue light will flash every 1 minute.




CHARGING

Blue light indicator will remain on.



FULL CHARGE

A steady blue light will remain on.

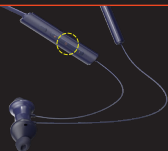

SAFETY AND MAINTENANCE

Please read the suggestions below in order to help prolong the product lifespan and clearly understand the warranty clauses.

- » Keep the product dry, do not put it in humid condition to avoid short circuit.
- » Do not expose it to the sun or high heat. High temperature will shorten the lifespan of electronic components, damage battery and deform some parts.
- » Do not put it in cold condition to avoid damage to PCB board.
- » Do not attempt to take apart the product.
- » Do not drop, strongly vibrate, or strike the product with hard objects, to avoid damage to inner electronic circuit.
- » Do not use harsh chemicals, or detergent to clean the item.
- » Do not scratch the surface with sharp items to avert damaging the case and appearance.
- » Do not over charge continuously for the sake of lifespan.



XSCAPE 13°

www.lavamobiles.com